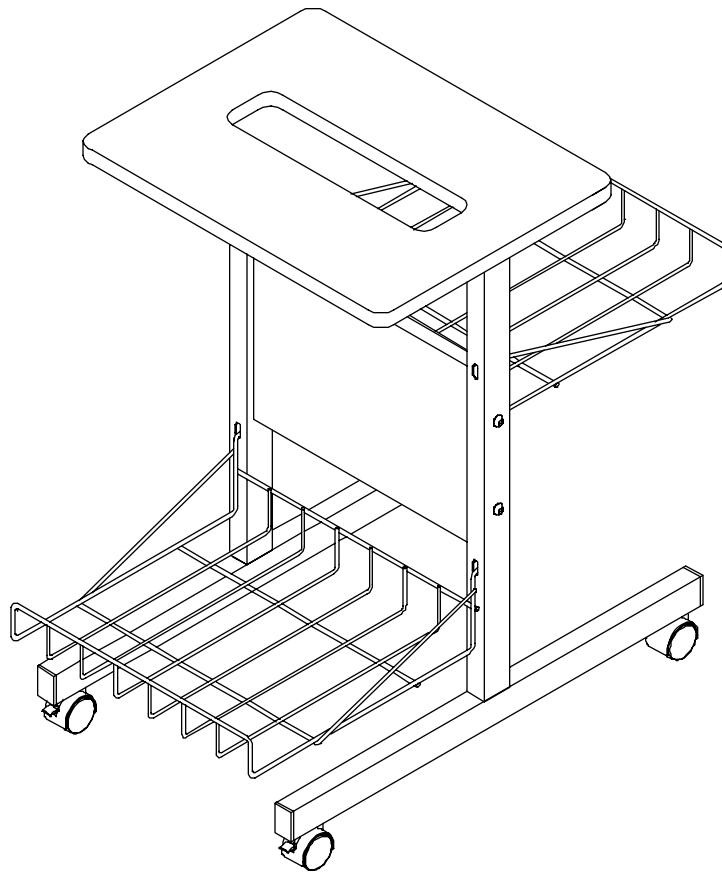


80 Column Single Printer Stand

 

 

 

 



 
 
 


Assembly Instructions

Single Printer Stand

Parts List

Hardware List

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P-1		Top Printer Platform	1 EA	A		Short Socket Screw	4 EA
P-2		Leg Assembly	2 EA	B		Long Socket Screw	4 EA
P-3		Stability Panel	1 EA	C		2" Caster(locking)	2 EA
P-4		Paper Basket	2 EA	D		2" Caster(non-locking)	2 EA
P-5		Plastic Foot (Attached to Paper Basket)	4 EA	E		Leveling Feet	4 EA
				F		Cable Tie (For Cable Management)	4 EA
				G		Caster Wrench	1 EA
				H		Allen Wrench	1 EA

(For convenience Printer Platform may be installed with unit turned up-side-down.)

To Assemble:

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Attach Top Printer Platform #P-1 to the (2) each Leg Assemblies #P-2 using (4) each Socket Screws A. (Finger tighten only)
- 3.) Attach Stability Panel #P-3 to the (2) each Leg Assemblies #P-2 using (4) each Socket Screws B. (Finger tighten only)
- 4.) Attach (2) each Locking Casters C to the front of 2 each Leg Assemblies #P-2 using caster wrench G. *For Stationary use, attach 2 each Leveling Feet E.*
- 5.) Attach (2) each Non-locking Casters D to the back of 2 each Leg Assemblies #P-2 using caster wrench G. *For Stationary use, attach 2 each Leveling Feet E.*
- 6.) Tighten all screws using included Allen Wrench H.
- 7.) Attach the (2) each Paper Baskets #P-4 to the (2) each Leg Assemblies #P-2.


Important Information:

Do not use unless all screws are tight.

At least every six months, check all screws to be sure they are tight.

If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

Single Printer Stand Assembly Diagram

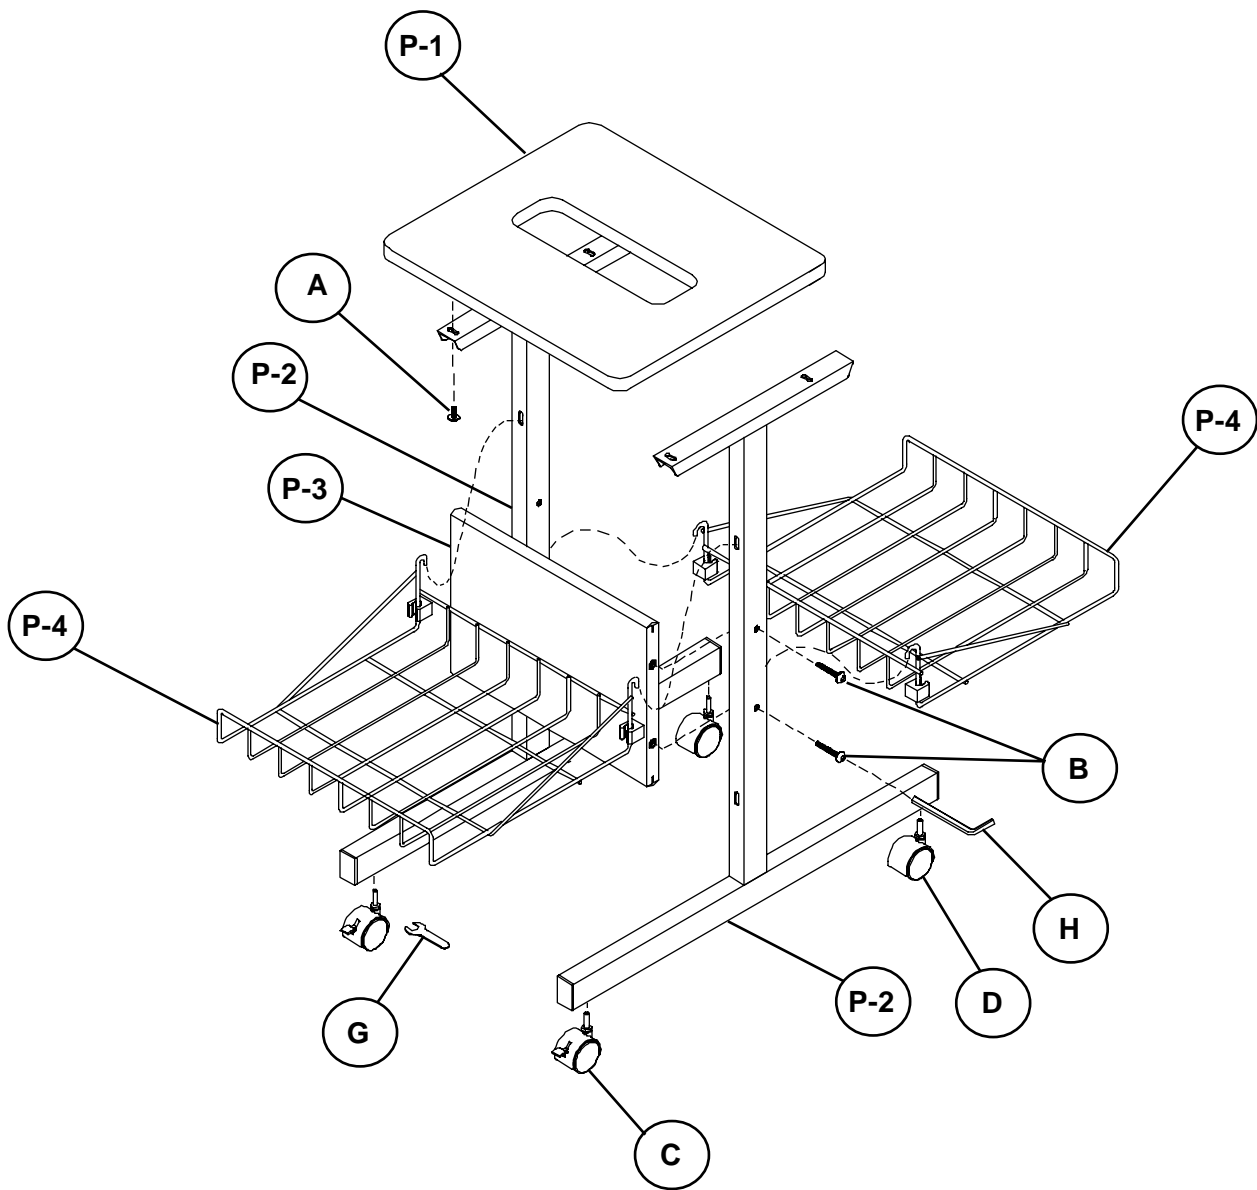

Note: It is recommended that when attaching stability panel, finger tighten all four screws before fully tightening with Allen Wrench.

Important

The product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase.

Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.